


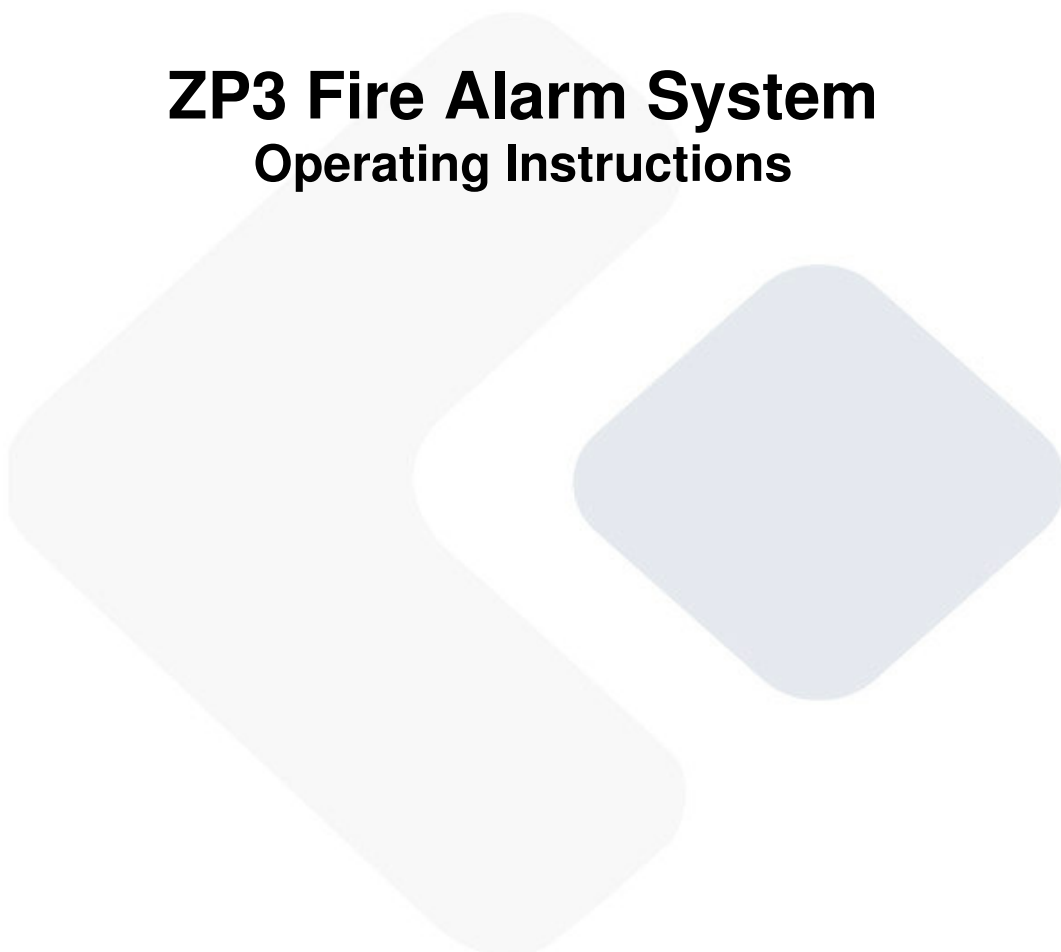

# **ZP3 Fire Alarm System**

## **Operating Instructions**





## 1. Operation Under a Fire Condition

- The common fire indicator flashes
- The appropriate Zone indicator flashes
- The internal buzzer will activate
- The alarm sounders throughout the building will activate
- A text message will be displayed providing information relating to the source of the fire. For example, a fire in Zone 13 would be displayed as follows:

```

FIRE ALARM (Zones)                Total: 01
01 Z013 MAIN BUILDING GRD FLR/ CELLAR 12:57
==== FIRE =====

```

The above information provides zonal information. The **individual device** text label can now be viewed by pressing the **VIEW POINTS** key. This will be displayed:

```

FIRE (Point) 1010 heat
MAIN BUILDING CELLAR PAPER STORE
Z013 MAIN BUILDING GRD FLR/ CELLAR    12:57
==== FIRE =====

```

### Canceling the Alarm (must only be undertaken on authority from responsible person)

- Investigate cause of alarm i.e. call point operated (glass broken), smoke or heat detector in alarm (red LED flashing on device in alarm).
- Press the **SILENCE ALARMS** key to cancel the system sounders
- Enter your four-digit user code and press the ↵ key.  
(there may be a delay before the alarm sounders silence).
- Press the **ACCEPT** key to cancel the panel buzzer.
- Press the **RESET** key to reset the system to normal.

The **ACCEPT** key must be pressed before the **RESET** key can be operated.

## 2. Operation Under a Fault Condition

The text display for faults is similar to that given for fire i.e. The display indicates the zone in fault. The text label for the device in fault together with the type of fault can be viewed by pressing the VIEW POINTS KEY.

### Canceling the Fault

- Press the **ACCEPT** key to cancel the panel buzzer.
- Enter your four-digit user code and press the ↵ key.
- Press the **RESET** key to reset the system to normal.

The **ACCEPT** key must be pressed before the **RESET** key can be operated.